30W Solid State Power Amplifier
37GHz~44GHz

RoHS Compliant

Features

- Wideband Solid State Power Amplifier
- Self Calibration
- Psat: +45dBm
- Gain: +52 dB Typical
- Supply Voltage: +48V

Typical Applications

- Wireless Infrastructure
- Military & Aerospace Applications
- Test & Measurement

Electrical Specifications, T_A = +25°C, Vcc = +48V

Parameter	Min.	Typ.	Max.	Units
Frequency Range		6 – 12		GHz
Gain		53		dB
Gain Flatness		±3		dB
Gain Variation Over Temperature (-45°C ~ +85°C)		±3		dB
Input Return Loss		15		dB
Output Return Loss		15		dB
Saturated Output Power (Psat)		45		dBm
Supply Current (+48 VDC)		1.6	5	A
Input Max Power (No Damage)		Psat – Gain		dBm
Weight		4.5		Kg
Impedance		50		Ohms
Input / Output Connectors		Input 2.4mm Female Output W22 Waveguide		
Finish		Nickel Plated		
Material		Aluminum / Copper		
Package Sealing		Epoxy and Screw Tight Sealing (Standard)		
		Hermetically Sealed (Optional)		

* P1dB, P3dB and Psat power test signal: 200µs pulse width with 10% duty cycle.
* For average CW power testing or increased duty cycle, a 5dB back off from Psat is required unless water/oil cooling system is applied.

30W Solid State Power Amplifier 37-44GHz

RF-LAMBDA INC. www.rflambda.com
Sales: sales@rflambda.com Technical : support@rflambda.com

Absolute Maximum Ratings	
Supply Voltage	+50 VDC
RF Input Power	Psat – Gain

Note: Maximum RF input power is set to assure safety of amplifier. Input power may be increased at own risk to achieve full power of amplifier. Please reference gain and power curves.

Biasing Up Procedure	
Step 1	Connect input and output with 50 Ohm source/load. (in band VSWR<1.9:1 or >10dB return loss)
Step 2	Connect Ground Pin
Step 3	Connect VDC
Power OFF Procedure	
Step 1	Turn Off VDC
Step 2	Remove RF Connection
Step 3	Remove Ground

Environmental Specifications and Test Standards

Parameter	Standard	Description
Operational Temperature	MIL-STD-39016	-45℃~+55℃ (Case Temperature less than 85C)
Storage Temperature		-50℃~+125℃
Thermal Shock		1 Hour@ -45℃ → 1 Hour @ +85℃ (5 Cycles)
Random Vibration		Acceleration Spectral Density 6 (m/s) Total 92.6 RMS
Electrical & Temperature Burn In		Temperature +85℃ for 72 Hours
Shock		1. Weight >20g, 50g half sine wave for 11ms, Speed variation 3.44m/s 2. Weight <=20g, 100g Half sine wave for 6ms, Speed variation 3.75m/s 3. Total 18 times (6 directions, 3 repetitions per direction).
Altitude		Standard: 30,000 Ft (Epoxy Sealed Controlled Environment) Optional: Hermetically Sealed (60,000 ft. 1.0 PSI min)
Hermetically Sealed (Optional)	MIL-STD-883	MIL-STD-883 (For Hermetically Sealed Units)

Note: The operating temperature for the unit is specified at the package base. It is the user's responsibility to ensure the part is in an environment capable of maintaining the temperature within the specified limits

Ordering Information	
Part No.	Description
RFLUPA37G44GB-W22	37GHz~44GHz Power Amplifier

Amplifier Use

Ensure that the amplifier input and output ports are safely terminated into a proper 50 ohm load before turning on the power. Never operate the amplifier without a load. A proper 50 ohm load is defined as a load with impedance less than 1.9:1 or return loss larger than 10dB relative to 50 Ohm within the specified operating band width.

Power Supply Requirements

Power supply must be able to provide adequate current for the amplifier. Power supply should be able to provide 1.5 times the typical current or 1.2 times the maximum current (whichever is greater).

In most cases, RF - Lambda amplifiers will withstand severe mismatches without damage. However, operation with poor loads is discouraged. If prolonged operation with poor or unknown loads is expected, an external device such as an isolator or circulator should be used to protect the amplifier.

Ensure that the power is off when connecting or disconnecting the input or output of the amp.

Prevent overdriving the amplifier. Do not exceed the recommended input power level.

Adequate heat-sinking required for RF amplifier modules. Please inquire.

Amplifiers do not contain Thermal protection, Reverse DC polarity or Over voltage protection with the exception of a few models. Please inquire.

Proper electrostatic discharge (ESD) precautions are recommended to avoid performance degradation or loss of functionality.

What is not covered with warranty?

Each RF - Lambda amplifier will go through power and temperature stress testing.
Since the die, ICs or MMICs are fragile, these are not covered by warranty. Any damage to these will NOT be free to repair.

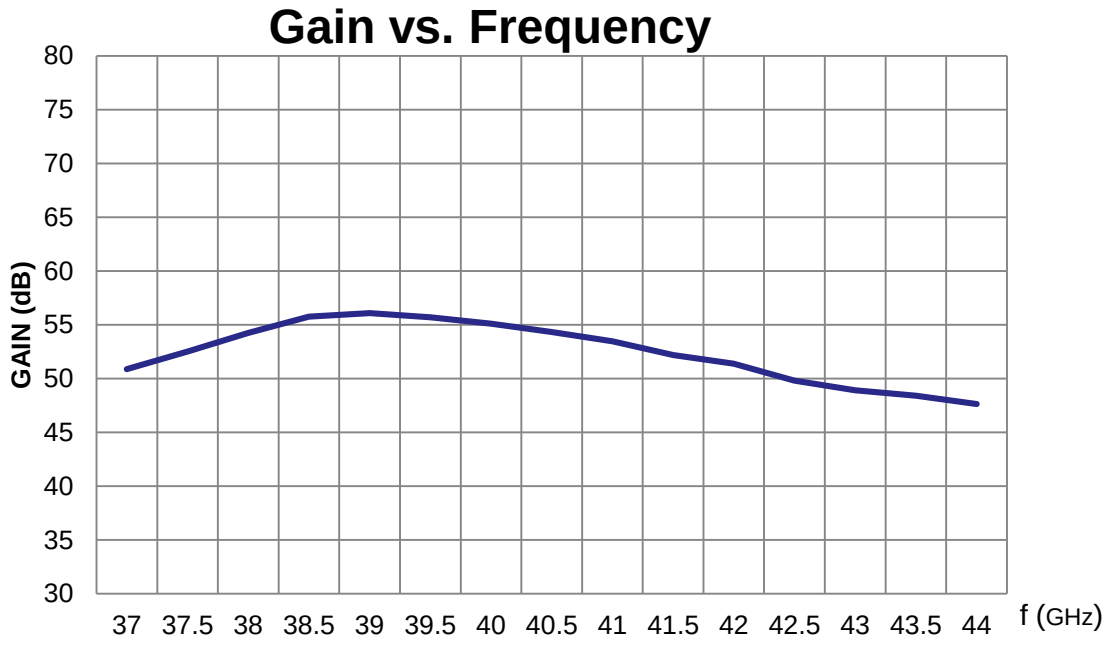

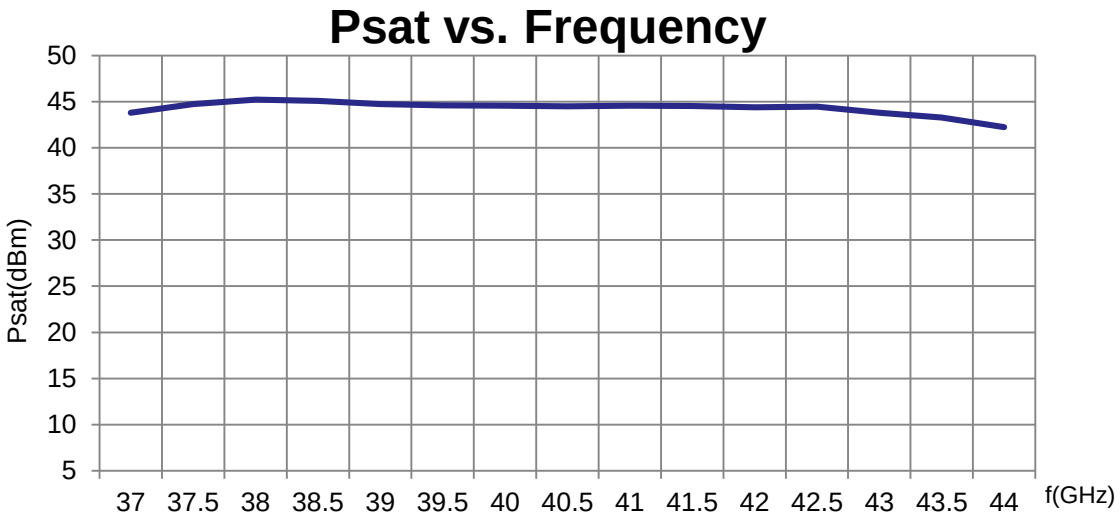

Note: Input/output return loss measurements include attenuators to protect equipment

Alarm Status Panel:

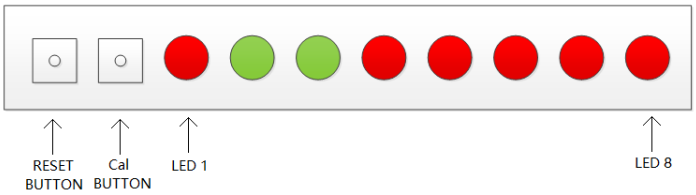

	Name	Function	Initial State	Description	Applied
	RESET	Control		Manual reset button to reset PA	Yes
	Calibration	Control		Manual calibration button to start calibrating the PA when CAL alarm LED is RED	Yes
LED 1	POWER	Indicator	RED Color	LED will light to RED color when supply power is applied	Yes
LED 2	Pout	Indicator	RED Color	LED will light to GREEN color when RF output power is ON	Yes
LED 3	System Initialing	Indicator	GREEN Color	LED will blink while boosting the system.	Yes
LED 4	RF IN	Indicator	GREEN Color	PA will shut down and latch this LED to a RED color when input signal is over limit *	Yes
LED 5	VSWR	Indicator	GREEN Color	PA will shut down and latch this LED to a RED color when output reflection is over limit *	Yes
LED 6	ID	Indicator	GREEN Color	PA will shut down and latch this LED to a RED color when an imbalance in the drain current of the combining branches occurs or if a drain current limit is reached *	Yes
LED 7	TEMP	Indicator	GREEN Color	PA will shut down and latch this LED to a RED color when driven over temperature *	Yes
LED 8	CAL	Indicator	GREEN Color	PA will shut down and latch this LED to a RED color if calibration needed while boosting the system *	Yes

*LED needs to be manually reset to initial state by pressing RESET button

Protection Connector Table:

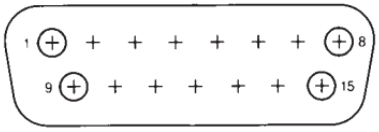

Pin #	Name	Function	Initial State	Description	Applied
1	Reset	Control		Resets PA when logic LOW is applied and released	Yes
2	Drain Disable	Control	LOW	Appling logic HIGH disables drains of amplifiers	Yes
3	Gate Disable	Control	LOW	Applying logic HIGH disables gates of amplifiers	Yes
4	RF IN Over	Indicator	LOW	Pin will be latched to logic HIGH when input signal is over limit	No
5	Temp Over	Indicator	LOW	Pin will be latched to logic HIGH when amplifier is driven over temperature	Yes
6	Current Over	Indicator	LOW	Pin will be latched to logic HIGH when drain current limit is reached	Yes
7	ID Imbalance	Indicator	LOW	Pin will be latched to logic HIGH when an imbalance in the drain current of the combining branches occurs	Yes
8	PA input power	Indicator		PA input power is represented by voltage	No
9	PA output power	Indicator		PA output power is represented by voltage	No
10	PA output reflection power	Indicator		PA output reflection power is represented by voltage	No
11	VSWR	Indicator	LOW	Pin will be latched to logic HIGH when output reflection is over limit	No
12	Temp Signal	Indicator		PA carrier case temperature is represented by voltage	Yes
13	+5V	Power Supply	+5V	+5V DC is supplied for reference	Yes
14	GND	Ground	GND	Ground	Yes
15	GND	Ground	GND	Ground	Yes

HIGH/LOW voltages are standard TTL signals:
0.0V-0.8V = LOW
2V-5V = HIGH

Outline Drawing:

All Dimensions in: mm [inch]

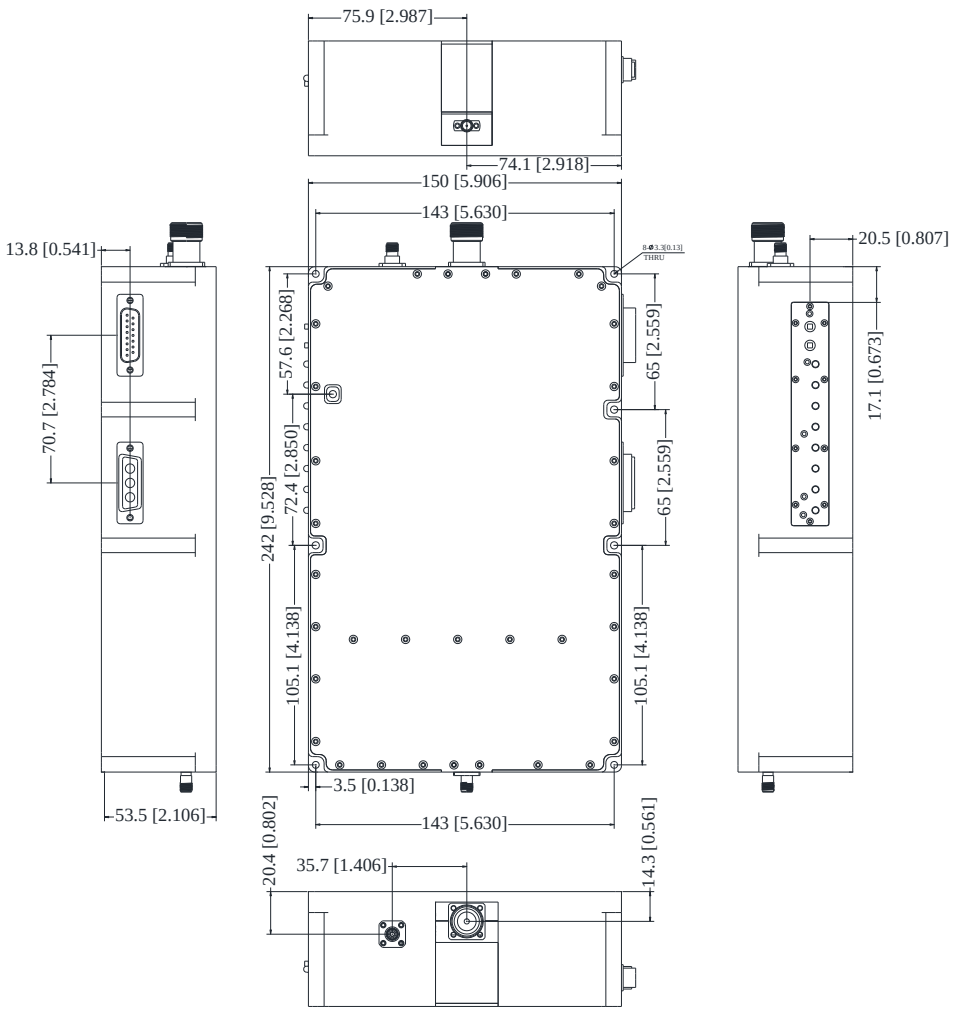

Heat Sink and cooling fan required during operation

Important Notice

The information contained herein is believed to be reliable. RF-Lambda makes no warranties regarding the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for any of the information contained herein. RF-Lambda assumes no responsibility or liability whatsoever for the use of the information contained herein. The information contained herein is provided "AS IS, WHERE IS" and with all faults, and the entire risk associated with such information is entirely with the user. All information contained herein is subject to change without notice. Customers should obtain and verify the latest relevant information before placing orders for RF-Lambda products. The information contained herein or any use of such information does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other intellectual property rights, whether with regard to such information itself or anything described by such information.

RF-Lambda products are not warranted or authorized for use as critical components in medical, life-saving, or life sustaining applications, or other applications where a failure would reasonably be expected to cause severe personal injury or death.